

ZCO2-4 ZONES CO CONTROL PANEL

Automatic control panel COsensor addressable certified UNE 23300

Addressable COsensor control panel for carbon monoxide (CO) and dioxide nitrogen (NO $_{\rm 2}$) diffusion sensors designed with EN 50545-1 and UNE 23300 certified.

It has the following models ZafirCO2 (Ref. ZCO2), ZafirCO3 (Ref. ZCO3) and ZafirCO4 (Ref. ZCO4). They correspond with 2, 3 or 4 zones and up to 25 CO and/or 25 $\rm NO_2$ sensors by zone. These models have DVB version (Double Ventilation and Batteries).

The COsensor ZafirCO control panel allows setting the activation concentration for ventilation level 1, 2 and alarm, as well as the delays for the activation and delays for the stop of these levels/alarm

It has independent dry contact outputs per zone for each level of ventilation and alarm, as well as general fault output and auxiliary supply 30 Vdc.

The control panel has a maintenance mode for easy testing the operation of sensors by watching the flashing LEDs of the sensors when they face to the test gas.

The control panel can identify all sensors at the installation by their programming number. The auto configuration feature of the control panel will automatically detect all sensors and display a summary in the display. Confirming this information, control panel goes directly into "work" mode.

The philosophy and operation mode of the equipment is designed according to European standard EN 50545-1, using diffusion sensors and factory calibration for operation during the operational life of the sensors, and UNE 23300 certified.


FEATURES

- Control panel up to 4 ventilation zones with diffusion sensors brand COsensor model SCO (CO sensor) and SDN (NO₂ sensor).
- Dry contact output (COM/NO) Ventilation 1, Ventilation 2 (DVB models only) and alarm.
- Fault dry contact output (COM/NO/NC).
- Auxiliary 30 Vdc 1A power output.
- Concentration measures averaged according to EN 50545-1 up to 60 minutes.
- Ventilation level 1, ventilation level 2 (models DVB) and alarm selectable from 5 to 300 ppm of CO and from 0,1 to 30 ppm of NO₂.
- Delay time for activation and delay time to stop of ventilation 1 and ventilation 2 (models DVB), selectable between 0 and 10 minutes.
- Delay time for activation and delay time to stop of the alarm selectable between 0 and 5 minutes.
- Maintenance mode to check operation of sensors.
- System with auto configuration functionality.
- Space for batteries 2 x 12 Vdc 7 Ah (DVB models only).
- Backlit LCD Display 4 lines and 40 characters.
- Dimensions: 424 x 330 x 160 mm (with cover).
- Designed according to European standard EN 50545-1.
- UNE 23300 Certified.

TECHNICAL FEATURES			
Supply voltage	110/230Vac 50/60Hz	Max. current per zone	150mA / 26 a 32Vdc
Max. consumption	70VA at 230V/AC	Dry contact ventilation	230Vac / 30Vdc 1A
Control panel power supply	2,5A	Alarm dry contact	230Vac / 30Vdc 1A
Batteries (only DVB model)	2 x 12V 7Ah SLA	Fault dry contact	230Vac / 30Vdc 1A
Supply fuse	4A	Environmental conditions	-10°C +50°C
Battery charger	500mA 27V/DC 20°C	Dimensions	424x330x160mm (with cover)
Sensors per zone	25 CO and/or 25 NO₂	Weight (without batteries)	7kg
IP protection	IP30	Standard	EN 50545-1 y UNE 23300
		Max. current 30V output	1A




Compositor Wagner, 8 PJ Can Jardí 08191 Rubí Barcelona (+34) 935 862 690 cofem@cofem.com www.cofem

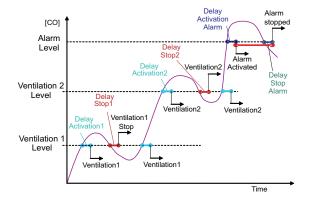


Parameter	Value	Margin	
	50 ppm (CO)	5-300 ppm (CO)	
Ventilation 1 level	1 ppm (NO ₂)	0,1-30 ppm (NO ₂)	
Vent. 1 activation delay	4 min	0-10 min	
Vent. 1 stop delay	4 min	0-10 min	
	100 ppm (CO)	Vent1-300 ppm (CO)	
Vent. 2 level	3 ppm (NO ₂)	Vent1-30 ppm	
Vent. 2 activation delay	4 min	0-10 min	
Vent. 2 stop delay	4 min	0-10 min	
A11	200 ppm (CO)	Vent1/vent2-300 ppm (CO)	
Alarm level	5 ppm (NO ₂)	Vent1/vent2-30 ppm	
Alarm activation delay	1 min	0-5 min	
Alarm stop delay	1 min	0-5 min	
Concentration average	0 min (instantaneous)	0-60 min	

NOTE: Don't have in consideration ventilation 2 in models of only 1 ventilation Diagram of ventilation operation

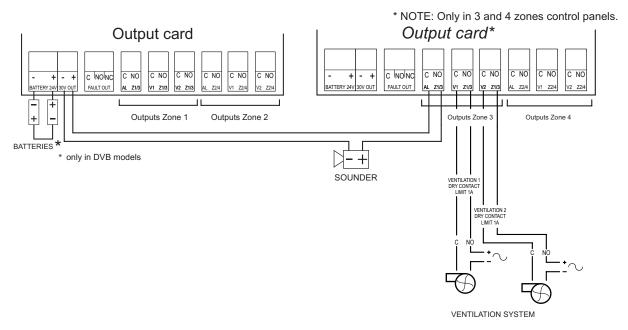

Operation scheme of DVB control panels

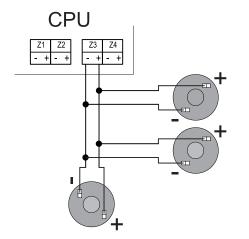

NOTE: Scheme applicable only to zone 3. The other zones are connected in the same way. Control panels with other capacities should not have some connectors.

Connection scheme for 4 zones DVB control panel



cofem@cofem.com www.cofem.com